Meaningful Innovation.

WEEE Number: 80133970

INSTRUCTION MANUAL

LED FLOOD LIGHT



TECHNICAL DATA

MODEL	SKU	WATTS	LUMENS	BEAM ANGLE	LIFE SPAN [HOURS]	DF	CRI	INPUT VOLTAGE	OPERATION TEMPERATURE	DIMENSION	N.W. (KGS)	MAX MOUNTING HEIGHT	PROJECTED AREA(MM²)
VT-44031	23692 23693	30W	4800 lm	115°	25,000	>0.9	>70	AC: 220-240V, 50Hz	-20°C to +45°C	164.5x34x153mm	0.41	<5M	25168.5
VT-44051	23694 23699	50W	8000 lm	115°	25,000	>0.9	>70	AC: 220-240V, 50Hz	-20°C to +45°C	183.5x34x169mm	0.56	<5M	31011.5
VT-44106	23700 23701	100W	16000 lm	115°	25,000	>0.9	>70	AC: 220-240V, 50Hz	-20°C to +45°C	253.5x40x242.5mm	1.1	<5M	61473.75
VT-44160	23702 23703	150W	24000 lm	115°	25,000	>0.9	>70	AC: 220-240V, 50Hz	-20°C to +45°C	328.5x43x295mm	1.78	<5M	96907.5
VT-44206	23696 23704	200W	32000 lm	115°	25,000	>0.9	>70	AC: 220-240V, 50Hz	-20°C to +45°C	402.5x44x349.5mm	2.8	<5M	140673.75
VT-44303	23826	300W	48000 lm	115°	25,000	>0.9	>70	AC: 220-240V, 50Hz	-20°C to +45°C	496x49x445mm	4.32	<5M	220720

*This product contains a light source of energy efficiency class<C>,where <C> shall be replaced by the energy class of the contained light source.

INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installing and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 5 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 Hours Daily operation. Usage of product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.

IP65 RATING

05 YEAR WARRANTY*

SPHERE 360° STAYS BRIGHT

SUPER BRIGHT 160+ LM/WATT EFFICIENCY

FR Cet appareil, ses accessoires et cordons se recyclent

À DÉPOSER EN MAGASIN ou À DÉPOSER EN DÉCHÈTERIE

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

IN CASE OF ANY QUERY/ISSUE WITH THE PRODUCT, PLEASE REACH OUT TO US AT: SUPPORT@V-TAC.EU
FOR MORE PRODUCTS RANGE, INQUIRY PLEASE CONTACT OUR DISTRIBUTOR OR NEAREST DEALERS.
V-TAC WEST EUROPE LTD. GROUND FLOOR, 71 LOWER BAGGOT STREET, DUBLIN 02, IRELAND DO2 P593

WARNING

- Please make sure to turn off the power before starting the installation.
- Installation must be performed by a qualified electrician.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
- Terminal block not included.
- Proper grounding should be ensured throughout the installation.
- For outdoor use.
- Replace any cracked protective shield.
- Minimum distance from lighted objects 1m. 1M

NOTE


- To reduce the risk of strangulation the flexible wiring connected to this luminaire shall be effectively fixed to the wall if the wiring is within arm's reach.
- In order to maintain the IP protection of the product, the cable entry/gland should be installed on the bottom side.

MULTI-LANGUAGE MANUAL QR CODE

Please scan the QR code to access the manual in multiple languages.


Caution, risk of electric shock.


This marking indicates that this product should not be disposed of with other household wastes.

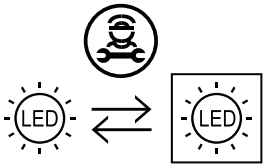



Replaceable (LED only) light source by a professional


INSTALLATION DIAGRAM

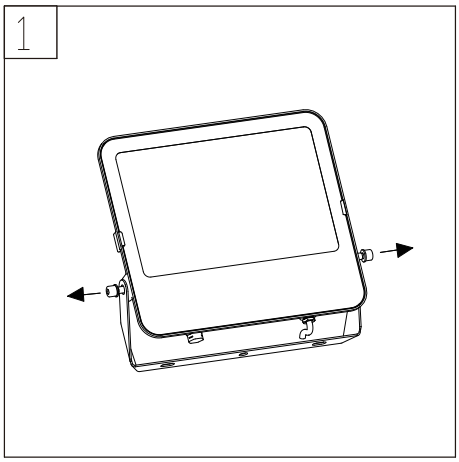

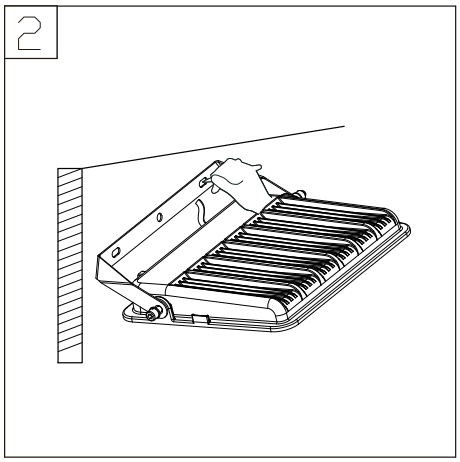

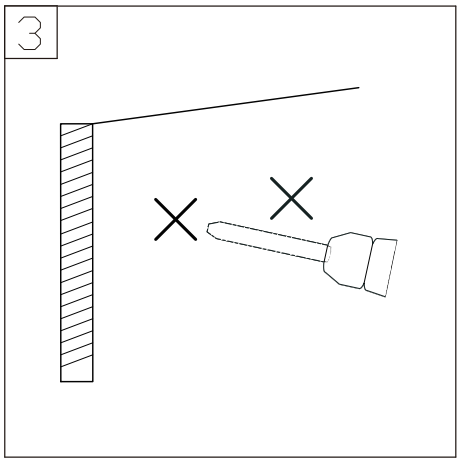

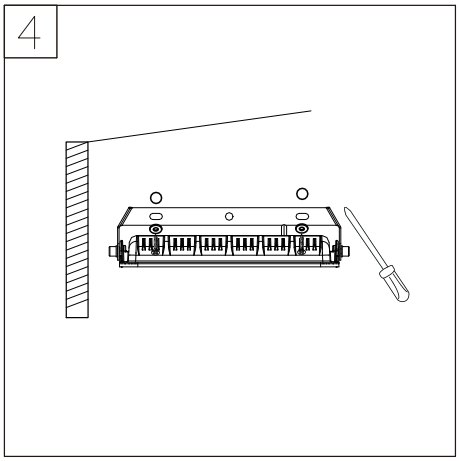

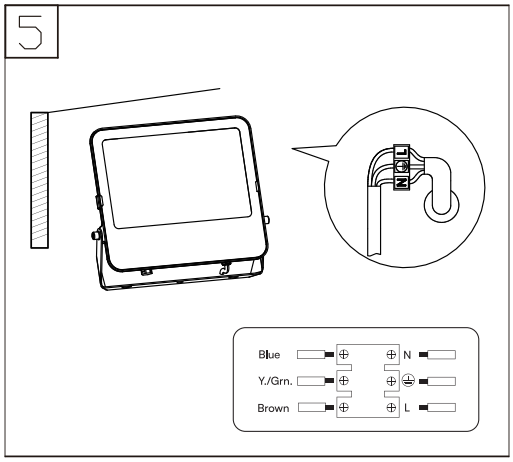

WIRE LENGTH

30W	0.5M
50W	0.5M
100W	1 M
150W	1 M
200W	1 M
300W	1 M


INSTALLATION INSTRUCTION

- DO NOT USE IN AREAS WITH LIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEMPERATURE RANGE. *CONNECT WITH WATERPROOF CABLE HOUSE ONLY. *ENSURE ELECTRICITY IS SWITCH OFF BEFORE INSTALLATION.

- Please do not mount to a surface that is prone to vibrations .*
- Remove the screw and the bracket afterward. (Figure 1)Before drilling, mark the hole position for fixing the bracket onto the wall (Screw not supplied). (Figure 2)
- Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 4)
- Mount the bracket back to the fixture. Adjust the floodlight according to the desired position. Tighten the screw. (Figure 5) Connect your main cable (HO5RN-F3G1.0mm2 Recommended) with the input lead of our product through the waterproof junction box.
- Note, the line (-) of the lead. (Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw) Switch on the power to make sure if the product is working.

DISMANTLING INSTRUCTIONS

(For Market surveillance team only)

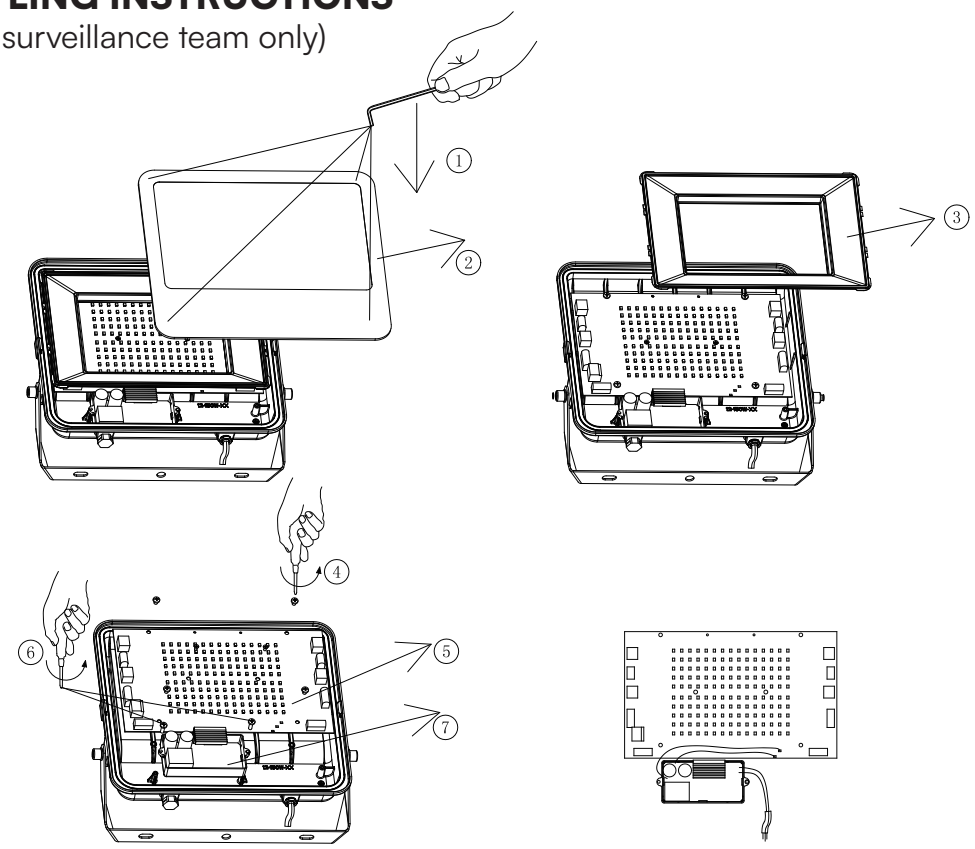

Note: Light source removal will void the warranty

V-TAC UK LTD. IN CASE OF ANY QUERY/ISSUE WITH THE PRODUCT PLEASE REACH OUT TO US AT SUPPORT@VTACEXPORTS.COM V-TAC, 5A TUNGSTEN PARK, DOWNS ROAD, WITNEY, OXFORDSHIRE, OX29 0AX

VTAC EUROPE LTD. IN CASE OF ANY QUERY/ISSUE WITH THE PRODUCT, PLEASE REACH OUT TO US AT: SUPPORT@V-TAC.EU FOR MORE PRODUCTS RANGE, INQUIRY PLEASE CONTACT OUR DISTRIBUTOR OR NEAREST DEALERS. V-TAC EUROPE LTD. BULGARIA, PLOVDIV 4000, BUL.L.KARAVELOW 9B

RoHS CE UKCA 22 PAP